

INSTRUCTIONS FOR PART NUMBERS: 1035-1; 1035-2; 1035-3


Drop tank instructions

Start construction by using a washer to mark the trim line. This will produce a line that will match both tank halves.

Trim away the excess plastic with a pair of scissors. Then test the fit between the two parts.

Apply cement to one of the tank halves then bond the two together using your fingers to align the parts.

Give the cement a few hours to set completely then sand the edges to a perfect match.

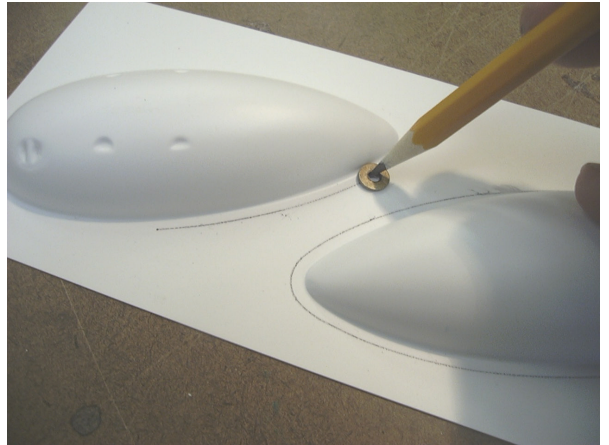

Paints with strong solvents may soften the plastic so light coats should be applied or at least tested on scrap plastic. Tayma brand paint is recommended.

Model Master brand liquid cement is recommended. PN / 8872. Other adhesives can be used but should be tested on scrap plastic before assembly begins. Ca adhesives work also, however the use of "kicker" will harden the plastic and cause it to crack.

The method used to attach your drop tank is a personal preference choice. The use of Velcro is suggested to avoid damage to your model should the tank ever contact the ground while landing.